


ML-TVD-710T1610

ML-TVS-710T1610

User Instructions & Error Code
Troubleshooting

Button Layouts

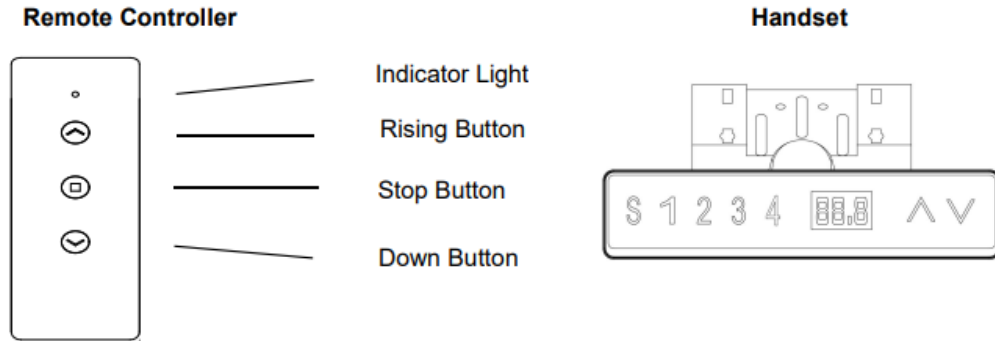

Lift Operation

<p>Remote Controller Pairing</p>	<p>To pair the remote:</p> <ol style="list-style-type: none"> 1. Turn on the lift. 2. Press and hold the Up (▲) button on the remote control. 3. Release the button once you hear “beep” twice. <p>The remote control is now successfully paired and ready for use.</p>
<p>Stopping the Lift During Movement</p>	<p>To stop the lift while it is moving up or down, press the Stop (□) button.</p>
<p>Saving Height Position</p>	<p>You can save up to four height positions.</p>

	<ol style="list-style-type: none">1. Press the “S” button. The display will be flashing “S-”2. While it is flashing, press one of the buttons 1–4 to save the current height to that number. <p>Each number button (1–4) can store one height position.</p>
Over-Temperature Protection	<p>If the lift operates for a prolonged period, the control box may activate over-temperature protection.</p> <ul style="list-style-type: none">• The display will show “HOT”.• The handset and remote control will not function during this time.• After approximately 18 minutes, the display will return to the actual height, and normal operation will resume. <p>Emergency Option: You may disconnect the power until the adapter indicator light turns off, then reconnect the power to release the protection. However, this may affect the control system and is not recommended unless necessary.</p>

Troubleshooting Guide

Factory Reset	<p>Press and hold the Down (▼) button, the lift should start to go down slowly after a while and the display should show RST. Please continue to press and hold as the lift goes to the bottom to recalibrate itself and then it will display the minimum height: 71cm. When the display shows the height value, release the button.</p> <p>The amount of time it takes for this may vary, so be prepared to press and hold for upto 2 minutes and wait for this to happen.</p>
Minimum Display Height	<p>Press and hold the “S” button, then press the Down (▼) button.</p> <p>When the display starts flashing, release the buttons.</p> <p>Use the Up (▲)/ Down (▼) buttons to adjust to the desired display height.</p> <p>Press S to save.</p>
Travel (Stroke) Setting	<p>Press and hold the “S” button, then press the Up (▲) button.</p> <p>When the number starts flashing, release the buttons.</p> <p>Use the Up (▲)/ Down (▼) buttons to adjust to the desired travel value.</p> <p>Press S to save.</p>
Metric / Imperial Units	<p>Press and hold the “S” button for 8 seconds to automatically switch between metric and imperial units.</p>
Upper & Lower Limits	<p>Upper Limit</p> <p>Set upper limit:</p> <ul style="list-style-type: none">• Raise the lift to the desired height, quickly press the “S” button 7 times. The display will show “SH1” to indicate the limit is set.

	<p>Cancel upper limit:</p> <ul style="list-style-type: none">• Raise the lift to the upper limit, quickly press the “S” button 7 times. The display will show “SH0” to indicate the limit is unlocked. <hr/> <p>Lower Limit</p> <p>Set lower limit:</p> <ul style="list-style-type: none">• Lower the lift to the desired height, quickly press the “S” button 7 times. The display will show “SL1” to indicate the limit is set. <p>Cancel lower limit:</p> <ul style="list-style-type: none">• Lower the lift to the lower limit, quickly press the “S” button 7 times. The display will show “SL0” to indicate the limit is unlocked.
Anti-Collision Sensitivity Adjustment	<p>Unplug the handset. Press and hold the “S” button while plugging it back in. When the display shows “L-2”, release the button.</p> <ul style="list-style-type: none">• Default is Level 2 (factory setting).• Press “1” to disable setting.• Press “2” to set Level 1• Press “3” to set Level 2• Press “4” to set Level 3 <p>Press “S” to save.</p>

Memory Buttons	Short press “S” to display “RST” . Before it disappears, press the memory button 1, 2, 3, or 4 to assign the current position to that memory button.	
Remote Pairing	<p>Pairing: Press and hold the Up button on the remote, then power on the control box. When you hear continuous beeping, pairing is successful.</p> <p>Unpairing: Press and hold the Down (▼) button on the remote, then power on the control box. When you hear continuous beeping, unpairing is successful.</p>	
Error Code	Description	Troubleshoot
RST	Initialization required	Press and hold the Down (▼) button until the height display appears
ER1	Motor connection error	Check whether the motor cable is properly connected or if the motor is faulty
HOT	Overheat protection form prolonged us.	Wait 18 minutes before operating again
<p>Remark: 1, If the handset displays “RST”, perform the reset operation. The TV lift will function normally after completing the reset procedure.</p> <p>2, If the lift is stuck at a position and can not move down even after you clear the lower limit. Please perform factory reset.</p>		

Note

1. Do not turn on multiple controllers at the same time during pairing tests, as each controller can recognize only one remote.
2. Use this product strictly according to the specified technical parameters.
3. Keep the product away from corrosive gases and dusty environments.
4. Ensure proper waterproof protection during use.